

TIENDA24HS🕒



AJAX

AJAX

[www.tienda24hs.com](http://www.tienda24hs.com)

[info@tienda24hs.com](mailto:info@tienda24hs.com) WhatsApp +34654049975 - +34 910059142





**AJAX**

## ÍNDICE

- 1. INTRODUCCIÓN
- 2. DESCARGA
- 3. NUEVA CUENTA
- 4. HUB
- 5. ESTANCIAS
- 6. DISPOSITIVOS
- 7. CONFIGURACIÓN HUB

**TIENDA24HS** ⌚

# 1. INTRODUCCIÓN

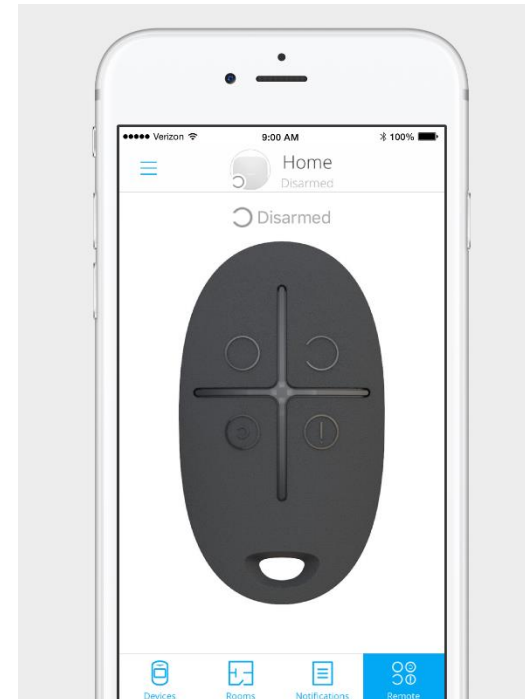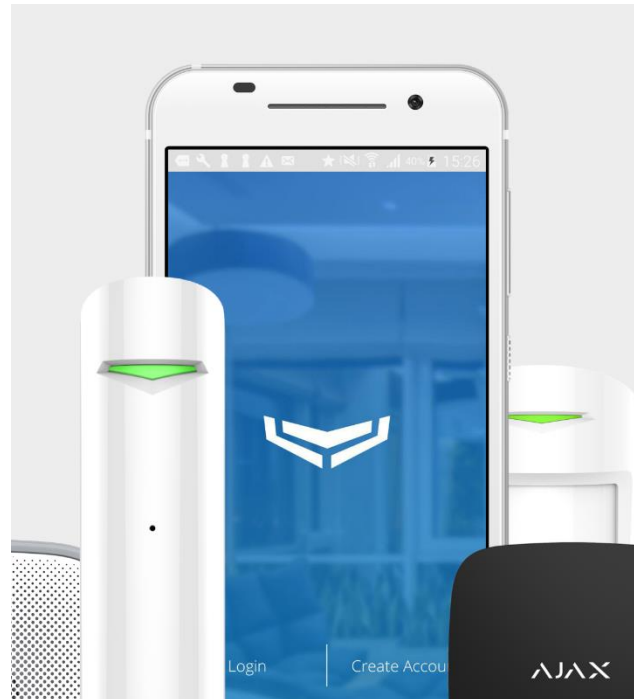

**TIENDA24HS** 



**AJAX**

## 2. DESCARGA



AppStore



Google Play




Web

<https://ajax.systems/applications/>



### 3. CREAR CUENTA

- ✓ Foto
- ✓ Nombre
- ✓ E-mail
- ✓ Contraseña

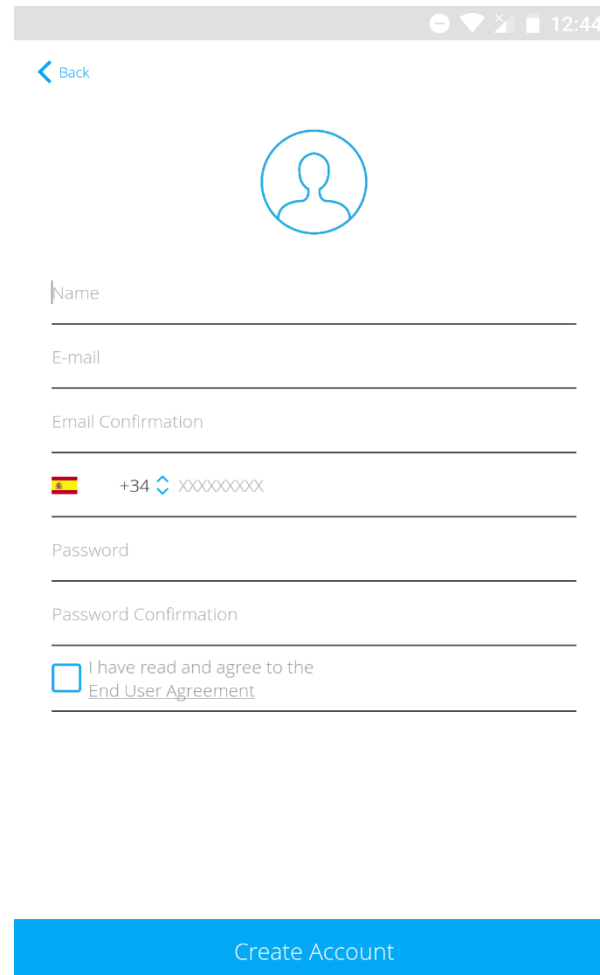

The screenshot shows a mobile application interface for account creation. At the top, there is a status bar with the time 12:44 and icons for signal, Wi-Fi, and battery. Below the status bar is a blue arrow and the text "Back". In the center, there is a circular icon with a person silhouette. Below this are several input fields: "Name", "E-mail", "Email Confirmation", a phone number field with a Spanish flag icon, "+34", and "XXXXXXXX", "Password", and "Password Confirmation". At the bottom, there is a checkbox and the text "I have read and agree to the End User Agreement". A large blue button at the very bottom contains the text "Create Account".



## 4. PANEL CENTRAL HUB

✓ NOMBRE Y ID (QR)

Hub Registration

To register a Hub with your account, please enter a Hub name and create a security code.

Hub Name

Registration Key

Add Hub

✓ PARÁMETROS DE CONFIGURACIÓN

Hub Settings

AJAX HUB TEST

Users

Ethernet

GSM

Geofence

Detection zone test

Jeweller


Service


Security Companies

## 5. ESTANCIAS

### ✓ NOMBRE Y FOTO

Add another room


Room Name 


  
Assign Photo


Name and photo can be changed anytime  
from Room Settings screen


Cancel OK



### ✓ TIPOS DE ESTANCIA



 Showroom




Showroom 

Room Type Standard 

 Delay when entering, sec 0 

 Delay when leaving, sec 0 

 Partial Arming

Delete Room

- ✓ Común
- ✓ Entrada
- ✓ Salida
- ✓ 24 h



## 6. DISPOSITIVOS

✓ NOMBRE, ID (QR) Y ESTANCIA

### Add Device

Name (i)

---

Device ID (QR) (i)

---

Showroom

---

Cancel
OK

### ✓ DOORPROTEC T

< Back
DoorProtect
⚙️

T	Temperature	~24 °C
	Signal Strength	
🔋	Battery Charge	100%
🔒	Lid	Closed
📶	Connection	Online
🔄	Sync State	OK
🔒	Primary detector	Closed
🔒	Secondary Detector	Disabled
🕒	Always Active	No

< Back
DoorProtect Settings

DoorProtect ✎

---

Room: Común ⌵

---

Primary Detector

---

External Contact Enabled:

---

Always Active:

---

ALERT WITH A SIREN

If opening detected

---

If external contact opened

---

Signal strength test

---

Detection zone test

---

User guide

---




Unpair Device





# 7. CONFIGURACIÓN HUB



✓ PARÁMETROS DE CONFIGURACIÓN

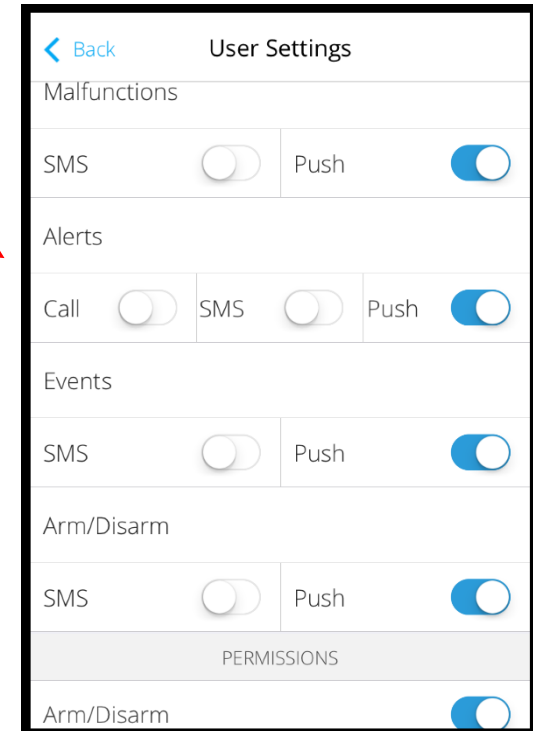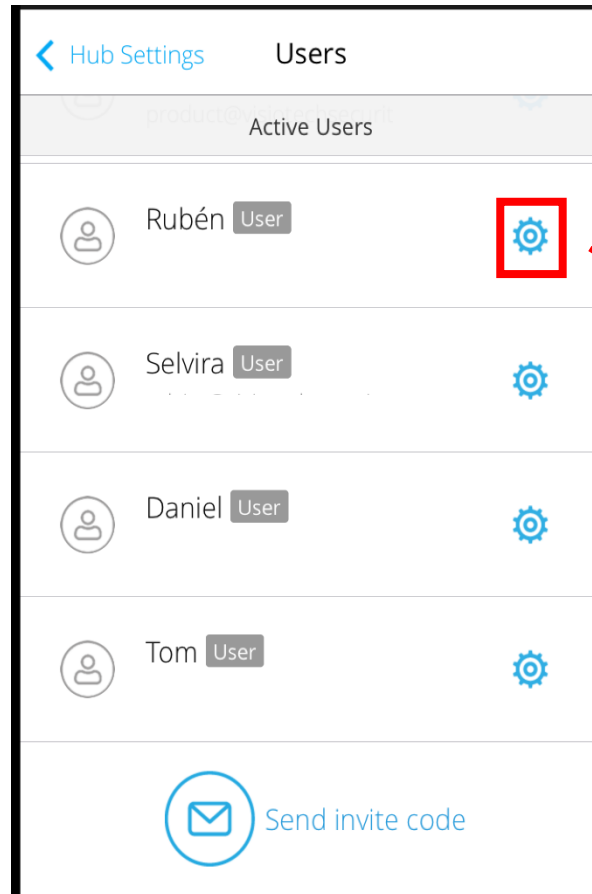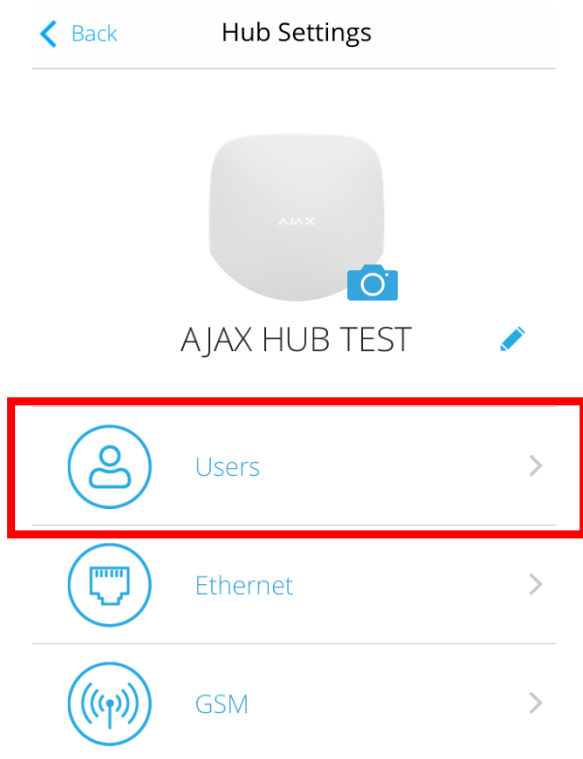



# 7. CONFIGURACIÓN HUB



✓ PARÁMETROS DE CONFIGURACIÓN

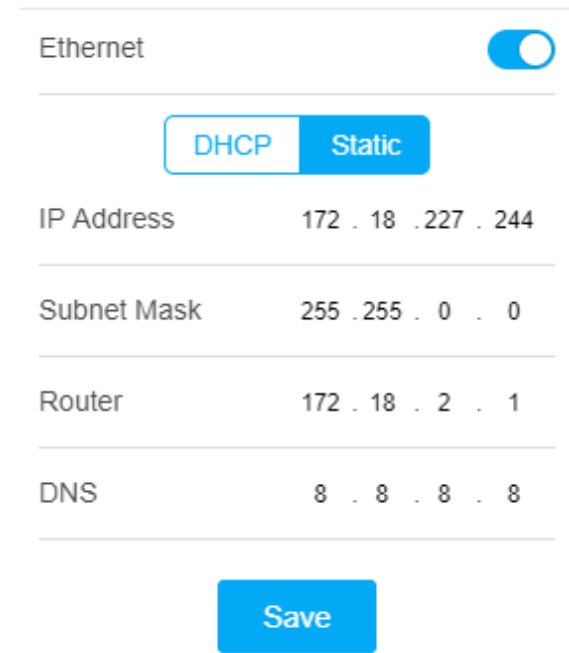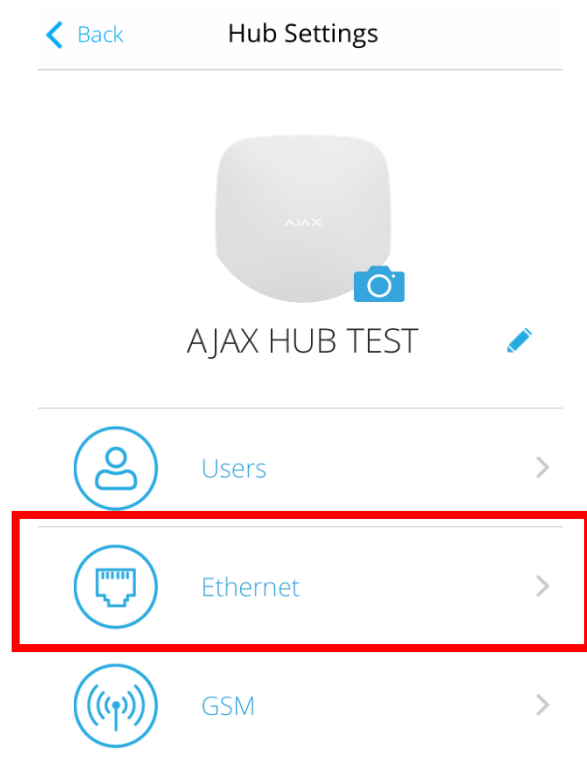



# 7. CONFIGURACIÓN HUB

✓ PARÁMETROS DE CONFIGURACIÓN

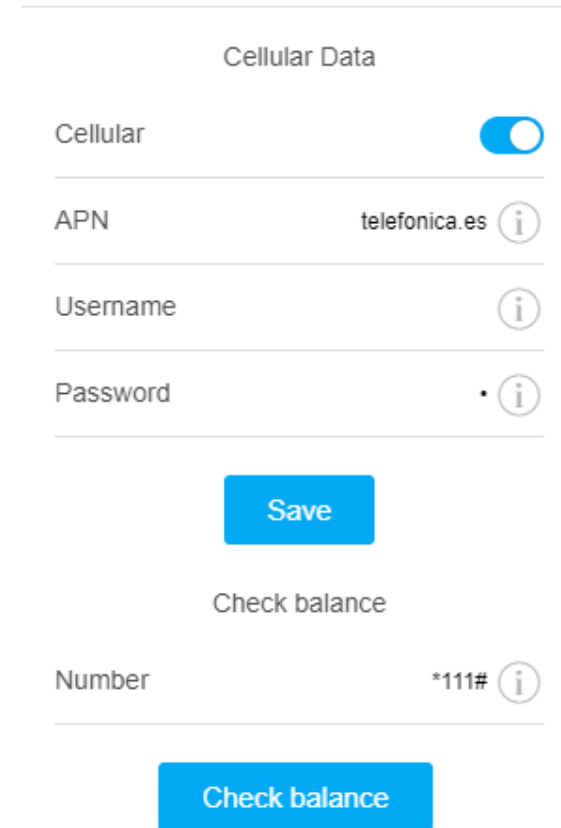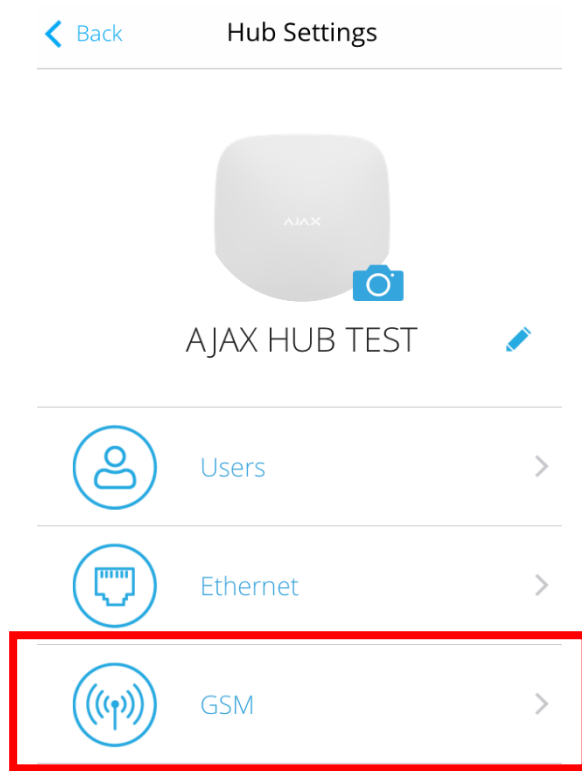



# 7. CONFIGURACIÓN HUB

✓ PARÁMETROS DE CONFIGURACIÓN

- Geofence
- Detection zone test
- Jeweller
- Service
- Security Companies



Geofence

GPS Enabled

Remind to arm when leaving

Remind to disarm when approaching






Geofence

ON  100 150 3000



# 7. CONFIGURACIÓN



## HUB ✓ PARÁMETROS DE CONFIGURACIÓN

-  Geofence >
-  **Detection zone test >**
-  Jeweller >
-  Service >
-  Security Companies >




< Hub Settings Detection zone test


COMÚN

-  DoorProtect  
Ready
-  MotionProtect  
N/A

PRODUCT

-  GlassProtect  
N/A

VISIOTECH

-  MotProt Plus  
N/A



# 7. CONFIGURACIÓN HUB

## ✓ PARÁMETROS DE CONFIGURACIÓN

- Geofence >
- Detection zone test >
- Jeweller >**
- Service >
- Security Companies >



< Hub Settings Jeweller

Detector Ping Interval (sec)

12 **36** 300

The shorter the interval, the more often a detector will send data to the Hub.

Number of undelivered packets to determine connection failure






3 **9** 60

The lower the number, the quicker the Hub will send an alarm about a connection failure with a detector.



# 7. CONFIGURACIÓN HUB

## ✓ PARÁMETROS DE CONFIGURACIÓN


-  Geofence >
-  Detection zone test >
-  Jeweller >
-  **Service >**
-  Security Companies >



< Hub Settings Service

Connection failure alarm delay (sec)


30 300 600



The amount of time before an alarm will be sent about a connection failure with the server.

Server ping interval (sec)

10 30 300



The shorter the interval, the quicker an alarm will be sent about a connection failure with the server.



Si tiene cualquier consulta estamos a su entera disposición nos puede contactar a [info@tienda24hs.com](mailto:info@tienda24hs.com) – WhatsApp +34654049975 - +34 910059142